

CERTIFIED DETAILER COATINGS MANUAL

You are about to apply one of the worlds most advanced ceramic coatings. With this user manual we are sharing with you the best practice on surface preparation, application and maintenance.

SURFACE PREPARATION:

Proper surface preparation is crucial for the bonding and durability of the installed coating. Always mind these simple rules:

- the surface should be decontaminated and free of any residue;
- old waxes, glazes or coatings should be stripped before proceeding;
- scratches, swirls marks, holograms should be removed by machine polishing;
- if you are working with a factory new car which does not require any paint correction, proceed with one pass of the Q² PRIMER to remove possible rests of transport conservation;
- paintwork needs to be fully degreased. Wash the car with Q²M DEGREASE TABS and use Q²M PREP before coating. **This step is obligatory!**

APPLICATION TIPS:

Never work in direct sunlight. Ensure the area you work is well ventilated.

There are two major factors influencing the work with coatings - temperature and humidity. The higher the temperature and/or humidity, the quicker the coatings flashes and cures. The initial bonding time of a ceramic coatings with the surface is only a few seconds. Don't wait, wipe off immediately.

TIP:

Use correct lighting. Apply the coating using reflected light. Point your lamp at the wall or ceiling - this will help you spot possible smudges. React quickly, remove them immediately. Use an appropriate amount of quality microfibre towels for wipe off. 4 up to 6 microfibers for each layer are a minimum. Swap sides of the MF during work. A final wipe with the Q²M SUEDE towel is highly advised. Ensure the car stays in stable conditions without the risk of rainfall or rapid humidity changes. Always respect individual product application instructions.

PRECAUTIONS:


- Skin protection recommended.
- Work in a well-ventilated area.
- Store in a dark, dry and cool place.
- Keep out of reach of children.

FACTS AND MAINTENANCE:


A dry coating is not a cured coating. Once the car is leaving your studio after a coating install, the coating is dry, which refers to 90% of fully cured. The full curing process might take up to 3 weeks, where the first week is crucial. This time is necessary for all solvents to evaporate and the coating to build its full structural integrity, hardness and resistance. This results in the following rules:

- Leave the car in the studio for at least 12 hours after the last layer of the coating.
- Never allow your customer to leave with a fresh coating.
- IR Lamps can be used to accelerate the drying process of the coating, but will not substitute the natural curing process.
- Educate your customers. Ask them not to wash the car for the first 14 days if the car did not collect heavy dirt or contamination (bird droppings, harsh weather,...).
- Advise correct maintenance. Propose the right tools and chemicals.


Q² INFINITE BASE TYPE 1

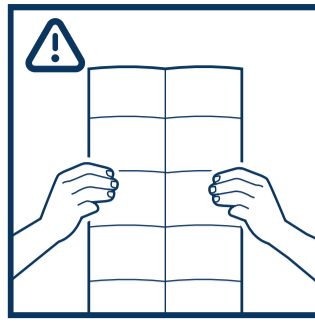


Read carefully all information in this manual, including the Tips&Tricks and Precautions sections.

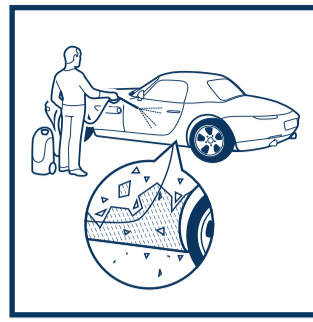

Start by pre-washing the vehicle with a solution like Q²M FOAM, then proceed with a thorough hand wash using a powerful degreasing agent such as Q²M DEGREASE TABS.

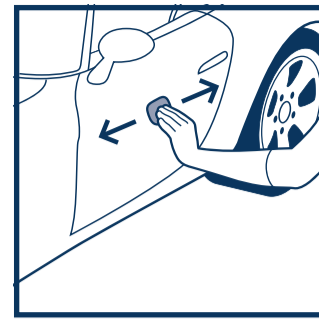


Decontaminate the paintwork using Q²M IRON, Q²M TAR. Use Q²M CLAY if required.

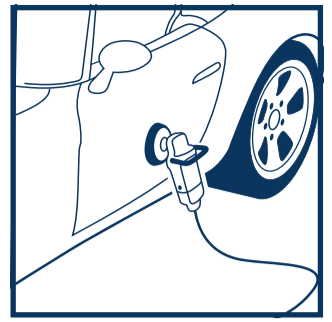


We recommend at least one step of paint correction to improve gloss and remove defects.



After completing the paint correction, wash the car using Q²M DEGREASE TABS and hot water for optimal surface preparation.

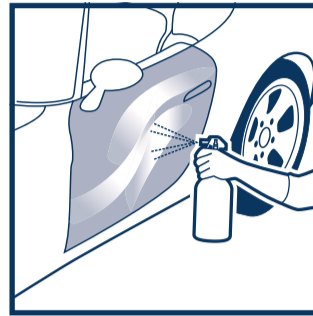

Ensure the surface is oil-free and completely dry. Use of Q²M PREP is obligatory. Wait 15 minutes before moving on the next step.

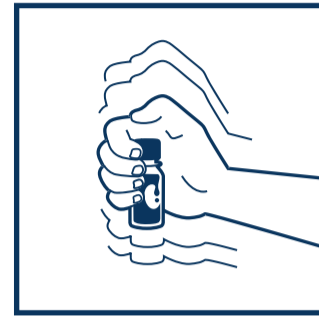

Shake the Q² INFINITE BASE TYPE 1 bottle before use.




Use a generous amount of product on the Q²M COATING APPLICATOR. Ensure the surface is cool and completely dust free.



Apply a thick layer of Q² INFINITE BASE TYPE 1. Level the coating well. Apply in your preferred motion. Levelling is crucial, not the application pattern. We recommend applying the coating to sections roughly the size of a shoulder-width area. In conditions of high temperature or humidity, reduce the application area for optimal results.



Wipe off after 10 seconds, or immediately in warmer climates for best results. Wipe off carefully, do not leave any streaks or smudges. Q² INFINITE BASE TYPE 1 might be used a single layer stand alone product.

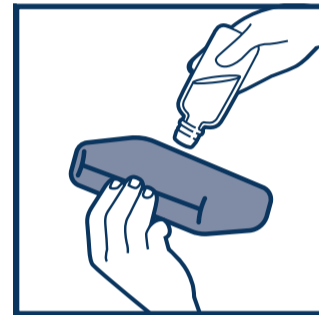

For enhanced performance, a topcoat of your choice can be applied. We recommend applying the topcoat immediately after coating the entire car with the base coat, following the same panel sequence. Use a generous amount of product and apply it in the same manner as the base coat.



Wipe off immediately and carefully, do not leave any streaks or smudges. Split larger panels (roof, bonnet, SUV doors) into sections.


NOTES

Let the coating dry for 12h before using the vehicle. Ensure the vehicle is stored in a dry place and will not be exposed to rain. After this period, the vehicle can be driven in all conditions.


Use of IR lamps is not obligatory. You may heat the vehicle before releasing it into harsh conditions. Heat each panel 10 minutes at 55/60°C surface temperature once the car is fully coated. Do not use IR between coating layers.

Advise your customer of proper maintenance and hand over the warranty set along with the maintenance guide. Advise not to wash the car with any strong detergents within the first 14 days if the car did not collect heavy dirt or contamination (bird droppings, harsh weather,...).


Q² INFINITE BASE TYPE 2

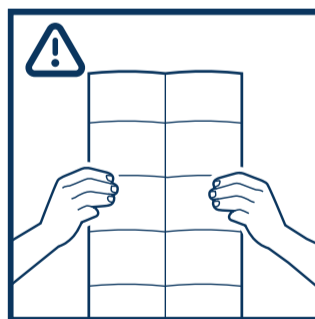


Read carefully all information in this manual, including the Tips&Tricks and Precautions sections.

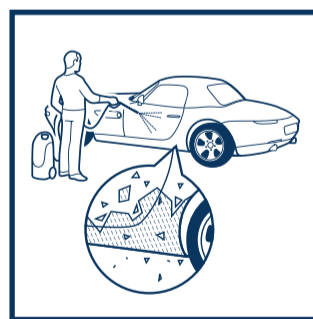


Start by pre-washing the vehicle with a solution like Q²M FOAM, then proceed with a thorough hand wash using a powerful degreasing agent such as Q²M DEGREASE TABS.

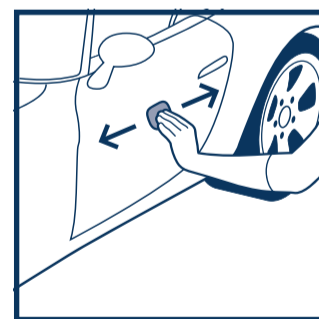


Decontaminate the paintwork using Q²M IRON, Q²M TAR. Use Q²M CLAY if required.

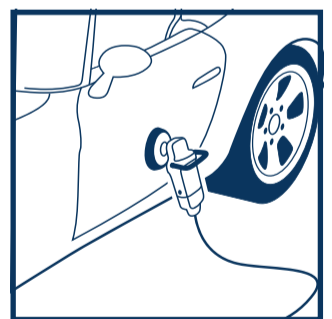

We recommend at least one step of paint correction to improve gloss and remove defects.

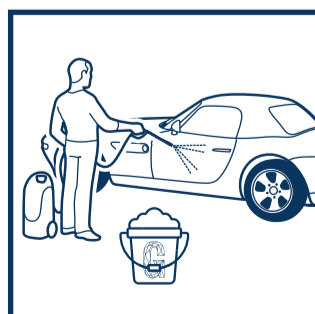

After completing the paint correction, wash the car using Q²M DEGREASE TABS and hot water for optimal surface preparation.

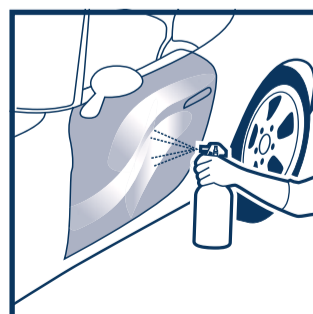

Ensure the surface is oil-free and completely dry. Use of Q²M PREP is obligatory. Wait 15 minutes before moving on the next step.



Shake the Q² INFINITE BASE TYPE 2 bottle before use.




Use a generous amount of product on the Q²M COATING APPLICATOR. Ensure the surface is cool and completely dust free.




Apply a thick layer of Q² INFINITE BASE TYPE 2. Level the coating well. Apply in your preferred motion. Levelling is crucial, not the application pattern. We recommend applying full panels. Split panels only while applying at high temperature or humidity.



Wipe off after 1 minute after applying on the whole panel/section. Feel free to adjust wipe off time depending of your climate. This coating has been designed for an extended wipe-off time of up to 20 minutes in stable conditions. Wipe off carefully, do not leave any streaks or smudges. Q² INFINITE BASE TYPE 2 might be used a single layer stand alone product.

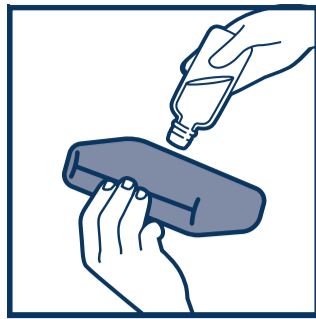

For enhanced performance, a topcoat of your choice can be applied. We recommend applying the topcoat immediately after coating the entire car with the base coat, following the same panel sequence. Use a generous amount of product and apply it in the same manner as the base coat.

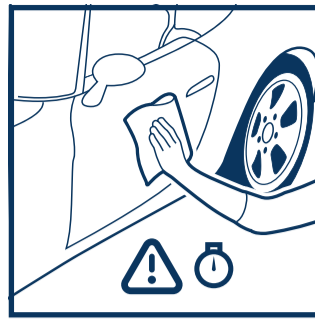

Wipe off immediately and carefully, do not leave any streaks or smudges. Split larger panels (roof, bonnet, SUV doors) into sections.


NOTES

Let the coating dry for 12 hours before using the vehicle. Ensure the vehicle is stored in a dry place and will not be exposed to rain. After this period, the vehicle can be driven in all conditions.

Use of IR lamps is not obligatory. You may heat the vehicle before releasing it into harsh conditions. Heat each panel 10 minutes at 55°/60°C surface temperature once the car is fully coated. Do not use IR between coating layers.

Advise your customer of proper maintenance and hand over the warranty set along with the maintenance guide. Advise not to wash the car with any strong detergents within the first 14 days if the car did not collect heavy dirt or contamination (bird droppings, harsh weather,...).


Q² FLASH EVO

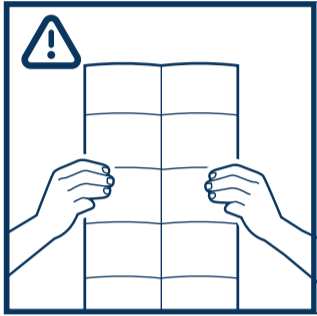


Read carefully all information in this manual, including the Tips&Tricks and Precautions sections.



Start by pre-washing the vehicle with a solution like Q²M FOAM, then proceed with a thorough hand wash using a powerful degreasing agent such as Q²M DEGREASE TABS.

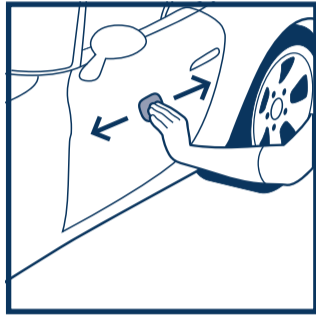

Decontaminate the paintwork using Q²M IRON, Q²M TAR. Use Q²M CLAY if required.

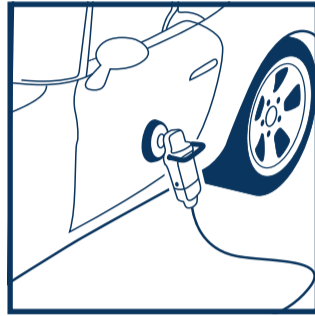

We recommend at least one step of paint correction to improve gloss and remove defects.

NOTES

Let the coating dry for 12 hours before using the vehicle. Ensure the vehicle is stored in a dry place and will not be exposed to rain. After this period, the vehicle can be driven in all conditions.

Do not wash the car with any strong detergents within the first 14 days. Read the attached maintenance booklet carefully.


Use Q²M CURE as a maintenance product during your wash routine.

Q² FLASH EVO can be topped with Q² CANCOAT PRO EVO 1 hour after the car being coated.

Q² FLASH EVO can be topped with Q² WAX after the first wash, at least 14 days after being coated.




After completing the paint correction, wash the car using Q²M DEGREASE TABS and hot water for optimal surface preparation.

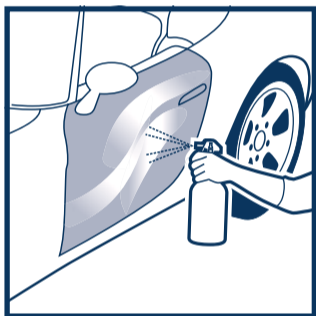

Ensure the surface is oil-free and completely dry. Use of Q²M PREP is obligatory. Wait 15 minutes before moving on the next step.



Shake the Q² FLASH EVO bottle before use.

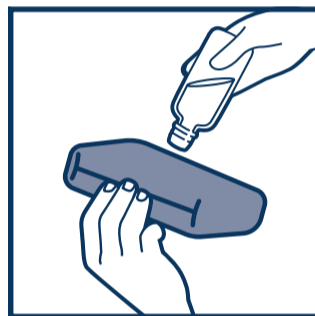


Use a generous amount of product on the Q²M COATING APPLICATOR. Ensure the surface is cool and completely dust free.



Apply a thick layer of Q² FLASH EVO. Level the coating well. Apply in your preferred motion. Levelling is crucial, not the application pattern. We recommend applying full panels. Split panels only while applying at high temperature or humidity.



Wipe off immediately (10 - 30 seconds) after applying on the whole panel/section.

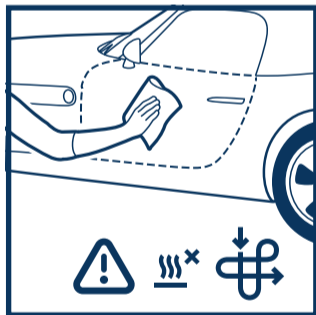

Please note that the wipe off time may vary depending on the country's climate (ask your supplier for advice). Work panel by panel/section by section, do not allow to fully dry.